

TAPTILO QUICK START GUIDE



© OHFA Tech, Inc.

SELF-STUDY MODE

Before use, see **Taptilo User Guide**.



[Download User Guide](#)

Topics *

Dots
Alphabet
Numbers
Words 1, 2, 3
Symbols
Contractions
Music (beta)


*Topics may vary by language.

Activities

Read
Trace & write
Listen & Write

Writing Styles

Common (Perkins)
Slate & Stylus

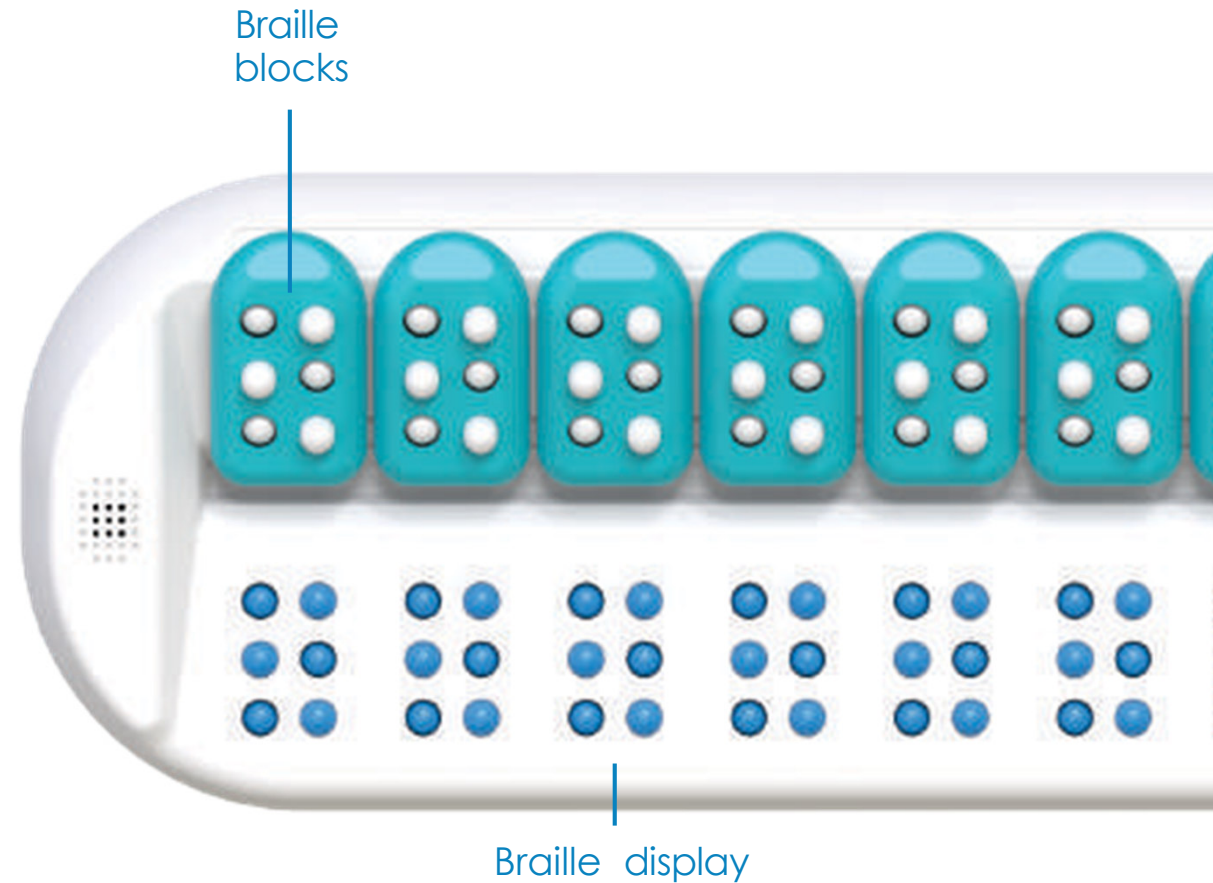


1. Press the **power button** to start the device. Make sure to charge it first.
2. Read the braille shown on the **braille display** (lower pad).

3. To write, pick up a **braille block** and push the dots up and down.
4. Place the blocks back on the upper pad and press the circle button to **check the answer**.
5. To **choose a new lesson**, press the left arrow and circle button together for two seconds.

Tips

- To hear the word **again**, press circle button for 2 sec
- To switch between **contracted & uncontracted** braille, press both arrows together for 2 sec
- Use the arrow buttons to move to the **next or previous** word
- To go to **settings**, press all three buttons together for 2 sec

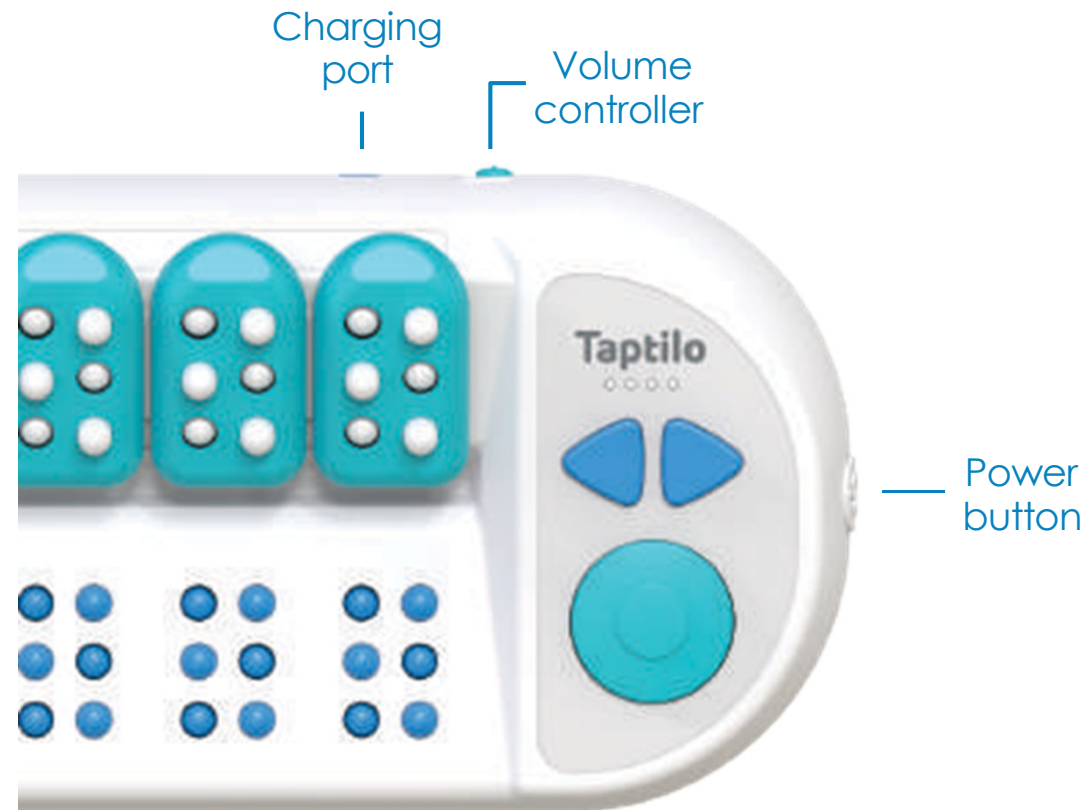

TEACHING MODE




Download
Taptilo App



Pairing with the app

1. Download the Taptilo app using the QR code.
2. While Taptilo is on, open the app and select "Tap to connect your device."
3. From the pop-up, select your device. Make sure Bluetooth is turned on.
4. To change connection settings, go to Options > Settings.

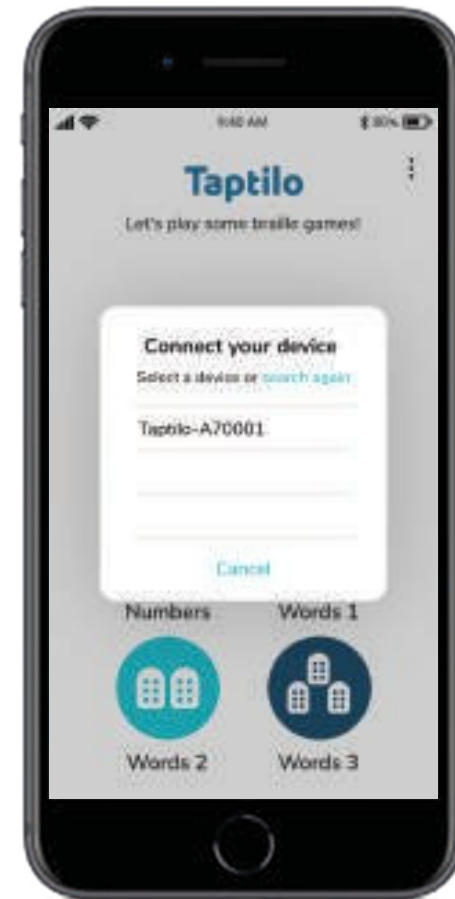


Using the app

1. **Select a topic** from the main menu
2. **Select a word** from the list. Taptilo will show in **braille**
3. Use the **blocks** to write the answer & press circle button
4. Check the **answer** on the app

Try these features

- Easy switch to contractions
- Quiz mode (no audio)
- Add favorites
- Slate & Stylus writing style
- Set practice reminder

To learn more, see **Taptilo User Guide**.

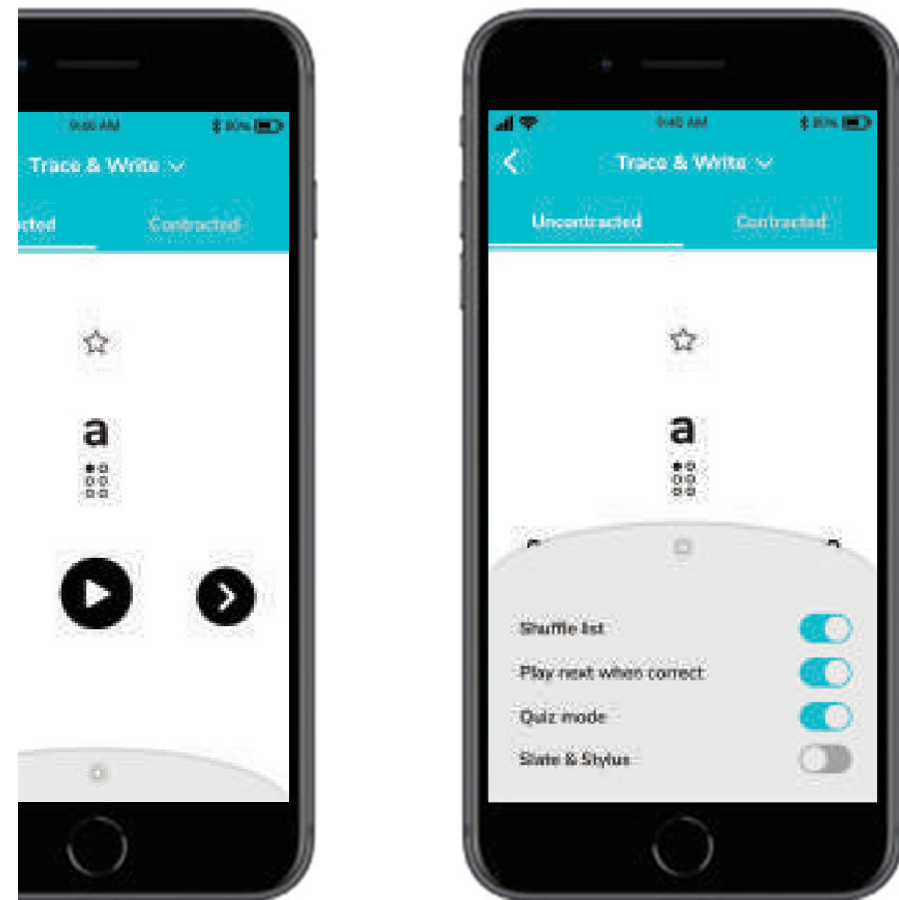

WHAT'S INSIDE

- Taptilo device
(includes 9 braille blocks)
- 1 Extra braille block
- Adaptor & micro USB cable
- Mini pouch
- Taptilo case
- Quick Start Guide

Download
User Guide



SUPPORT

Visit: www.brailletec.de

Address: Tom-Mutters-Str. 11
35041 Marburg
Germany

Email: brailletec@brailletec.de

Telephone: +49 (0) 6421 802-0

For technical support, please contact your local Taptilo distributor.

SAFETY & HANDLING

1. Do not use or store below 0°C or above 50°C (32°F – 122°F).
2. Do not place device or charger near a radiator or heat source.
3. Do not place sharp metal or magnetic objects near the device.
4. Make sure to use the designated charger to charge the device.
5. Do not place liquids near the device to prevent spillage.
(In case of spillage, turn device off, flip upside down and store in dry area for 2-3 days before restarting. Contact Customer Support immediately.)
6. Do not disassemble or alter any part of the device, including the serial number label.
7. Do not handle the device or the plug with wet hands.
8. Do not store under heavy weight put heavy weight or unusual stress to the device.

*Not following these guidelines may void your warranty and cause danger.

PRODUCT WARRANTY

Our warranty covers manufacturing defects in materials and workmanship that might occur during normal use of Taptilo. Consumable components like blocks are not covered. Defects resulting from improper maintenance, unauthorized repairs or failure to follow operational instructions are just a few of the items not covered. Damage caused by the use of accessories and parts, including chargers, that were not manufactured by OHFA Tech voids the limited warranty. For full details on your limited warranty, visit www.taptilo.com/warranty.

To receive service, please contact your local distributor or visit www.taptilo.com/support.

Please retain this document for future reference.